

by Gordon.

SMARTLIGHT

INSTRUCTIONS FOR ASSEMBLY, USE AND MAINTENANCE





4D MECHANISM







1. Height of the seat

Lowering the seat:

- a. Sit down on the seat
- b. Pull the lever upwards (the seat will drop slowly)
 c. Releasing the lever at the desired height will lock the position

Raising the seat:

- a. Stand up
- b. Pull the lever upwards (the seat will rise slowly)
- c. Releasing the lever at the desired height will lock the position







2. Angle of the backrest

Adjusting the backrest dynamically:

- a. Turn the lever clockwise
- b. Lean against the backrest
- c. The backrest is automatically released

Locking the backrest into position:

- a. Lean back until the backrest reaches the desired angle
- **b.** Turn the lever counter-clockwise = locked





3. Strength of the backrest pressure

Increasing the backrest pressure:


- a. Take your weight off the backrest
- **b.** Turn the quick adjustment mechanism counter-clockwise

Reducing the backrest pressure:

- a. Take your weight off the backrest
- **b.** Turn the quick adjustment mechanism clockwise



Assemble the gas cylinder to the base:

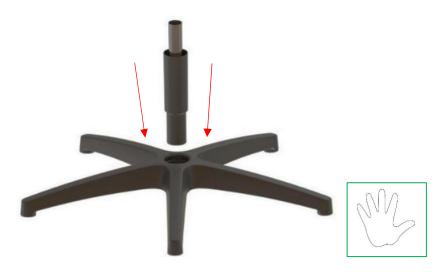

Assemble as in figure, Push the gas lift in to the middle hole of base.





Sit well back in the chair

The anatomically shaped seat should be fully occupied. Only then is proper contact with the supporting backrest assured.

Adjust the height of the seat precisely

The correct seat height means that the elbow joint adopts an angle of about 90°when the forearms are resting horizontally on the desktop. The knee joint will also adopt an angle of about 90°when the feet are flat on the floor.

Dynamic sitting

Dynamic sitting means changing your sitting posture frequently, or in other words shifting as often as possible between the front and rear sitting posture.

You should therefore adjust the backrest dynamically.

Correct use

This swivel office chair may only be used for the purpose for which it is intended and with due care. Using it inappropriately (e.g. as a stepladder, sitting on the armrests or placing extreme weight on one side) could result in accidents.

Casters

Casters can wear with normal use. Replace worn casters by ordering from Orders@GordonIsGood.com



by Gordon.

MAINTENANCE

CHROME PLATED PARTS: Clean with a soft cloth with some neutral detergent to polish the steel.

PAINTED PARTS: Clean with soft cloth dampened slightly with waterand dry with a dry cloth.

PLASTIC PARTS: Use soft cloth dampened slightly with water, without insistance, then dry with a dry cloth

ALUMINIUM PARTS: To clean use only specific products to polish metal parts in order to reduce the natural oxidation due to the hands contact. The aluminum parts tarnish naturally. LUXY recommends not using chemical detergents.

FABRIC: Fabric: pour some drops of neutral detergent on a damp and wringed out cloth, rub gently on the seat and leave it dry. See maintenance instructions on LUXY upholstery book. Luxy recommends using ecological products.

LETHER: Leather is a natural product. Imperfections give to the material its unmistakable aspect. In presence of marks, they have to be removed with a soft wool cloth. In case of ingrained stains, use only products for leather coloured with aniline. Do not expose leather to direct sunlight. Luxy recommends using ecological products.